

CERTIFICADO DE EXAMEN UE DE TIPO

EU-TYPE EXAMINATION CERTIFICATE



Notified Body No. 0370



No. **0370-4373-PPE/B**

ORGANISMO NOTIFICADO N° <i>NOTIFIED BODY NUMBER</i>	0370 - LGAI TECHNOLOGICAL CENTER (APPLUS)
SOLICITANTE / FABRICANTE <i>APPLICANT / MANUFACTURER</i>	Wenzhou Jinyi Medical Equipment Co., LTD. No.518-536,Zhongsong Avenue, Wanquan Town, Pingyang County, Wenzhou, Zhejiang, 325409, China
PLANTA DE PRODUCCIÓN <i>PRODUCTION SITE</i>	Wenzhou Jinyi Medical Equipment Co., LTD. No.518-536,Zhongsong Avenue, Wanquan Town, Pingyang County, Wenzhou, Zhejiang, 325409, China
REGLAMENTO DE APLICACIÓN PARA DAR LA CONFORMIDAD / APPLICABLE REGULATION TO GIVE CONFORMITY: REGLAMENTO (UE) 2016/425 SOBRE LOS EQUIPOS DE PROTECCIÓN INDIVIDUAL <i>REGULATION (EU) 2016/425 PERSONAL PROTECTIVE EQUIPMENT</i>	
PROCEDIMIENTO DE EVALUACIÓN DE LA CONFORMIDAD <i>CONFORMITY ASSESSMENT PROCEDURE</i>	Módulo // <i>Module</i> : B EXAMEN UE DE TIPO / EU TYPE EXAMINATION
IDENTIFICACIÓN DEL EPI (NÚMERO DE TIPO) <i>IDENTIFICATION OF THE PPE (TYPE NUMBER)</i>	Ref.: JY-006 Filtering half mask
NIVEL O NIVELES DE RENDIMIENTO O LA CLASE DE PROTECCIÓN DEL EPI / PERFORMANCE LEVEL OR PROTECTION CLASS OF THE PPE	FFP2 NR
NORMAS ARMONIZADAS / HARMONISED STANDARDS	EN 149:2001 + A1:2009 Dispositivos de protección respiratoria. Medias máscaras filtrantes de protección contra partículas. Requisitos, ensayos, marcado. <i>EN 149:2001 + A1:2009 Respiratory protective devices. Filtering half masks to protect against particles. Requirements, testing, marking</i>
FECHA DE EMISIÓN / ISSUE DATE	10/09/2020
FECHA DE MODIFICACIÓN / MODIFICATION DATE	16/10/2020
VALIDEZ HASTA / VALIDITY UNTIL	10/09/2025
<p>El presente certificado se mantendrá vigente durante 5 años siempre que el producto descrito no sea modificado y cumpla los requisitos esenciales de salud y seguridad establecidos en el Reglamento (UE) 2016/425. Para asegurar dicho cumplimiento, este certificado deberá ir acompañado de la documentación correspondiente a la Evaluación de Conformidad con el tipo según módulo C2, D (realizada por un Organismo Notificado, según frecuencia establecida).</p> <p><i>This certificate will remain valid for 5 years as long as the indicated product is not modified and fulfills the essential requirements of health and safety established in (EU) Regulation 2016/425. To ensure such compliance, this certificate must be accompanied by the documentation corresponding to the Conformity Assessment to type according to C2, D(carried out by a Notified Body according, to the established frequency).</i></p>	


LGAI Technological Center, S.A.
Xavier Ruiz Peña
Managing Director, Product Conformity B.U.



Este documento carece de validez sin su anexo técnico, cuyo número coincide con el del certificado.

This document is not valid without its technical annex, whose number coincides with the number of certificate.

Puede comprobarse la validez de este certificado en nuestra página web / *You can check the validity of this certificate on our website:*

www.appluslaboratories.com/certified_products

ANEXO TÉCNICO
TECHNICAL ANNEX

0370-4373-PPE/B

I. MODELOS INCLUIDOS EN EL CERTIFICADO

REFERENCES INCLUDED IN THIS CERTIFICATE

MARCA <i>BRAND</i>	YUKAIGIFTS
IDENTIFICACIÓN DEL EPI (NÚMERO DE TIPO) <i>IDENTIFICATION OF THE PPE (TYPE NUMBER)</i>	Ref.: JY-006 Filtering half mask
NIVEL O NIVELES DE RENDIMIENTO O LA CLASE DE PROTECCIÓN DEL EPI <i>PERFORMANCE LEVEL OR PROTECTION CLASS OF THE PPE</i>	FFP2 NR
INFORME DE ENSAYO <i>TEST REPORT</i>	S20081803801E-R1 issued by Shenzhen NTEK Testing Technology Co., Ltd. NTEK

CERTIFICADO DE CONFORMIDAD CON EL TIPO
CONFORMITY TO TYPE CERTIFICATE



Organismo Notificado N° 0370



No. **0370-4608-PPE/C2**

ORGANISMO NOTIFICADO N° <i>NOTIFIED BODY NUMBER</i>	0370 - LGAI TECHNOLOGICAL CENTER (APPLUS)
SOLICITANTE / FABRICANTE <i>APPLICANT / MANUFACTURER</i>	Wenzhou Jinyi Medical Equipment Co., LTD. No.518-536,Zhongsong Avenue, Wanquan Town, Pingyang County, Wenzhou, Zhejiang, 325409, China
PLANTA DE PRODUCCIÓN <i>PRODUCTION SITE</i>	Wenzhou Jinyi Medical Equipment Co., LTD. No.518-536,Zhongsong Avenue, Wanquan Town, Pingyang County, Wenzhou, Zhejiang, 325409, China
REGLAMENTO DE APLICACIÓN PARA DAR LA CONFORMIDAD APPLICABLE REGULATION TO GIVE CONFORMITY: REGLAMENTO (UE) 2016/425 SOBRE LOS EQUIPOS DE PROTECCIÓN INDIVIDUAL <i>REGULATION (EU) 2016/425 PERSONAL PROTECTIVE EQUIPMENT</i>	
PROCEDIMIENTO DE EVALUACIÓN DE LA CONFORMIDAD CON EL TIPO <i>CONFORMITY ASSESSMENT PROCEDURE TO TYPE</i>	Módulo // <i>Module:</i> C2 BASADA EN EL CONTROL INTERNO DE LA PRODUCCIÓN MÁS EL CONTROL SUPERVISADO DE LOS PRODUCTOS A INTERVALOS ALEATORIOS <i>BASED ON INTERNAL PRODUCTION CONTROL PLUS SUPERVISED CONTROL OF PRODUCTS AT ALEATORY INTERVALS</i>
IDENTIFICACIÓN DEL EPI (NÚMERO DE TIPO) <i>IDENTIFICATION OF THE PPE (TYPE NUMBER)</i>	Ref.: JY-006 Filtering half mask
NIVEL O NIVELES DE RENDIMIENTO O LA CLASE DE PROTECCIÓN DEL EPI / PERFORMANCE LEVEL OR PROTECTION CLASS OF THE PPE	FFP2 NR
FECHA DE EMISIÓN ISSUE DATE	16/10/2020
VALIDEZ HASTA VALIDITY UNTIL:	16/10/2021
El presente certificado se mantendrá vigente durante 1 año siempre que no se modifiquen las condiciones establecidas en el Certificado de Examen UE de Tipo referenciado en el Anexo. <i>This certificate will remain in force for 1 year as long as the conditions established in the EU Type certificate referenced in the annex are not modified.</i>	


LGAI Technological Center, S.A.
Xavier Ruiz Peña
Managing Director, Product Conformity B.U.



Este documento carece de validez sin su anexo técnico, cuyo número coincide con el del certificado.
This document is not valid without its technical annex, whose number coincides with the number of certificate.

Puede comprobarse la validez de este certificado en nuestra página web / *You can check the validity of this certificate on our website:*
www.appluslaboratories.com/certified_products


ANEXO TÉCNICO TECHNICAL ANNEX

0370-4608-PPE/C2

I. MODELOS INCLUIDOS EN EL CERTIFICADO

REFERENCES INCLUDED IN THIS CERTIFICATE

Nº CERTIFICADO DE EXAMEN UE DE TIPO <i>NR. EU TYPE EXAMINATION CERTIFICATE</i>	0370-4373-PPE/B
EMITIDO POR <i>ISSUED BY</i>	LGAI TECHNOLOGICAL CENTER S.A. (APPLUS) (Organismo notificado nº 0370 / Notified Body nr. 0370).
FECHA EMISIÓN <i>ISSUE DATE</i>	10/09/2020
FECHA DE MODIFICACIÓN <i>MODIFICATION DATE</i>	16/10/2020
VALIDEZ HASTA <i>VALIDITY UNTIL</i>	10/09/2025
MARCA <i>BRAND</i>	YUKAIGIFTS
IDENTIFICACIÓN DEL EPI (NÚMERO DE TIPO) <i>IDENTIFICATION OF THE PPE (TYPE NUMBER)</i>	Ref.: JY-006 Filtering half mask
NIVEL O NIVELES DE RENDIMIENTO O LA CLASE DE PROTECCIÓN DEL EPI / <i>PERFORMANCE LEVEL OR PROTECTION CLASS OF THE PPE</i>	FFP2 NR
INFORME DE ENSAYO DE CONFORMIDAD CON EL TIPO <i>CONFORMITY TO TYPE TEST REPORT</i>	S20081803802E-R1 issued by Shenzhen NTEK Testing Technology Co., Ltd.

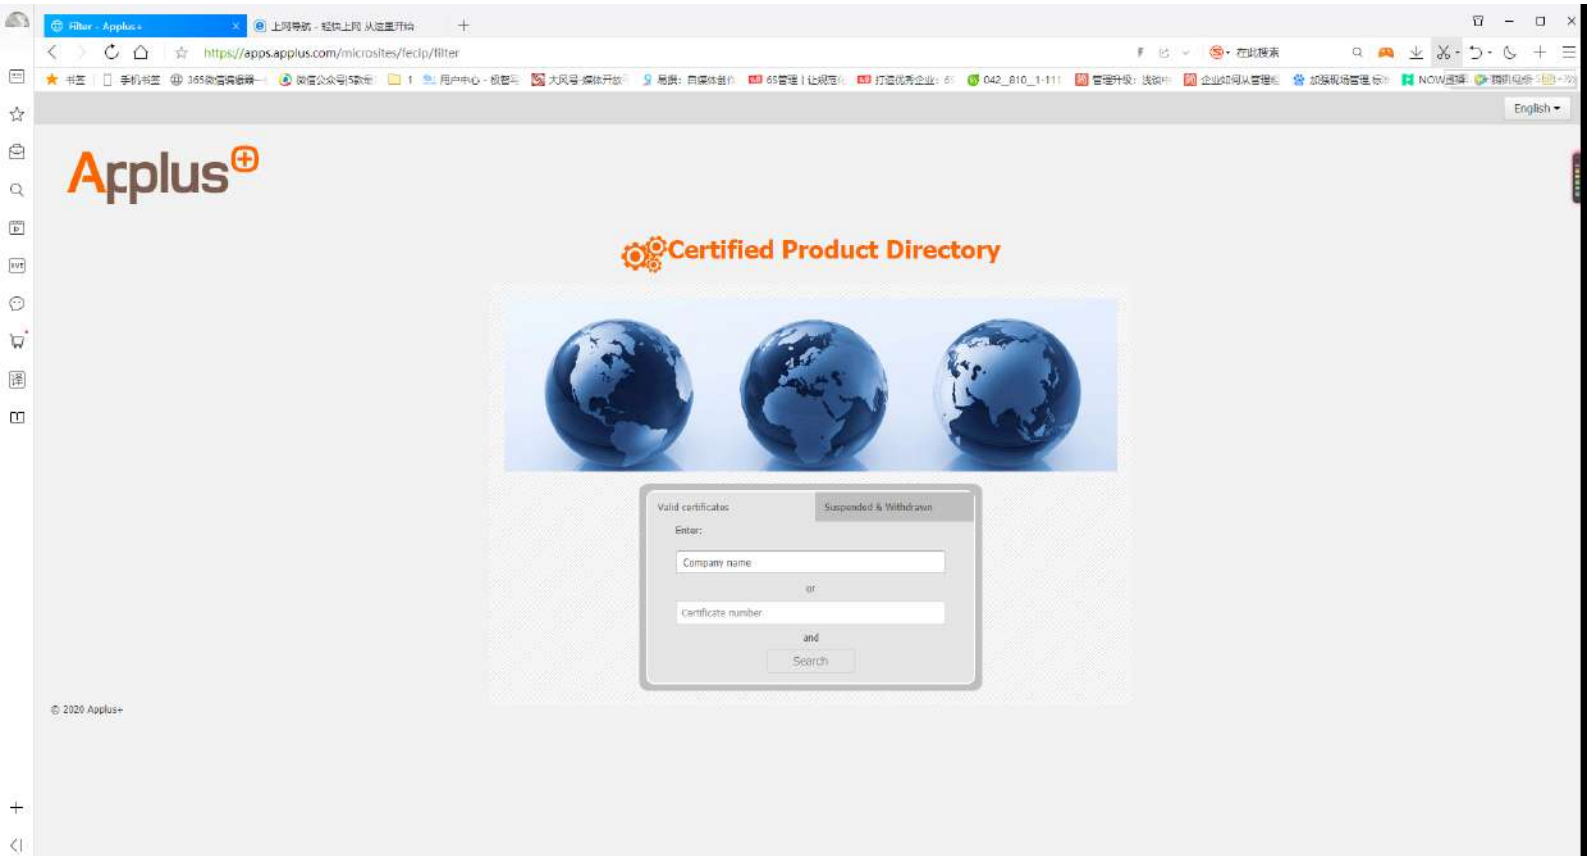



Certified Product Directory

Enter: or

Organization: WENZHOU JINYI MEDICAL EQUIPMENT CO., LTD.

Address NO. 518-536, ZHENGSONG AVENUE
City WENZHOU
Country China

Product: FILTERING HALF MASKS TO PROTECT AGAINST ...	Standard: EN 149	Certificate Type: Regulation (EU) 2016/425 - PERSONAL PROT...	Certificate number: 0370-4373-PPE/D	▼
Product: FILTERING HALF MASKS TO PROTECT AGAINST ...	Standard: EN 149	Certificate Type: Regulation (EU) 2016/425 - PERSONAL PROT...	Certificate number: 0370-4431-PPE/B	▼
Product: FILTERING HALF MASKS TO PROTECT AGAINST ...	Standard: Regulation (EU) 2016/425 - PERSONAL PROT...	Certificate Type: Regulation (EU) 2016/425 - PERSONAL PROT...	Certificate number: 0370-4583-PPE/C2	▼
Product: FILTERING HALF MASKS TO PROTECT AGAINST ...	Standard: Regulation (EU) 2016/425 - PERSONAL PROT...	Certificate Type: Regulation (EU) 2016/425 - PERSONAL PROT...	Certificate number: 0370-4008-PPE/C2	▼

Test Report

Applicant: Wenzhou Jinyi Medical Equipment Co., Ltd.
Address: No.518-536, Zhengsong Avenue, Wanquan Town, Pingyang County,
Wenzhou, Zhejiang, 325409, China

The following sample(s) was/were submitted and identified on behalf of the client as:

Product name: Filtering half mask
Model: JY-006
Trade mark: YUKAIGIFTS®
Manufacturer: Wenzhou Jinyi Medical Equipment Co., Ltd.
Address: No.518-536, Zhengsong Avenue, Wanquan Town, Pingyang County,
Wenzhou, Zhejiang, 325409, China
Classification: FFP2 NR
Sample quantity: 150 Pcs
Sample Received Date: Aug. 19, 2020
Testing Period: Aug. 19, 2020~ Aug. 25, 2020

Test Requirement:

According to the requirement of the client, the test item(s) of the sample is according to the standard EN149:2001+A1:2009.

Test Result(s): Please refer to the following page(s)

Test Method: Please refer to the following page(s)

Compiled by: Nancy

Reviewed by: May

Approved by: Mark Liaw

Date: 2020-10-13

Summary of assessment*

Clause	Assessment
7.3 Visual inspection	NRq
7.4 Packaging	Pass
7.5 Material	Pass
7.6 Cleaning and disinfecting	N.A.
7.7 Practical performance	Pass
7.8 Finish of parts	Pass
7.9.1 Total inward leakage	Pass
7.9.2 Penetration of filter material	Pass
7.10 Compatibility with skin	Pass
7.11 Flammability	Pass
7.12 Carbon dioxide content of the inhalation air	Pass
7.13 Head harness	Pass
7.14 Field of vision	Pass
7.15 Exhalation valve(s)	N.A.
7.16 Breathing resistance	Pass
7.17 Clogging	N.A.
7.18 Demountable parts	Pass

Key

Pass	Requirement satisfied.
NRq	The clauses were not required.
Fail	Requirement not satisfied. Refer to the "Result details" section for more information.
N.A.	Requirement not applicable.

* Assessment relates only to those specimens which were tested and are the subject of this report.

Test Result

Respiratory Protective Devices — Filtering Half Masks to Protect against Particles — Requirements, Testing, Marking
(EN 149:2001+A1:2009)

Clause 7.3 Visual inspection

Test Requirement	Results	Comment
Marking and the information supplied by the manufacturer, requirements refer to clause 9 and clause 10.	The clauses were not required.	NRq

Clause 7.4 Packaging

(EN 149:2001+A1:2009 Clause 8.2)

Test Requirement	Results	Comment
Particle filtering half masks shall be offered for sale packaged in such a way that they are protected against mechanical damage and contamination before use.	Comply	Pass

Clause 7.5 Material

(EN 149:2001+A1:2009, Clause 8.2 & 8.3.1 & 8.3.2)

Test Requirement	Results	Comment
Materials used shall be suitable to withstand handling and wear over the period for which the particle filtering half mask is designed to be used.	Comply	Pass
After undergoing the conditioning described in 8.3.1 none of the particle filtering half masks shall have suffered mechanical failure of the facepiece or straps.	Comply	Pass
When conditioned in accordance with 8.3.1 and 8.3.2 the particle filtering half mask shall not collapse.	Comply	Pass
Any material from the filter media released by the air flow through the filter shall not constitute a hazard or nuisance for the wearer.	Comply	Pass

Clause 7.6 Cleaning and Disinfecting

(EN 149:2001+A1:2009, Clause 8.4 & 8.5 & 8.11)

Test Requirement	Results	Comment
<p>If the particle filtering half mask is designed to be re-usable, the materials used shall withstand the cleaning and disinfecting agents and procedures to be specified by the manufacturer.</p> <p>With reference to 7.9.2, after cleaning and disinfecting the re-usable particle filtering half mask shall satisfy the penetration requirement of the relevant class.</p>	<p>Not applicable (Not designed to be re-usable)</p>	<p>N.A.</p>

Clause 7.7 Practical Performance

(EN 149:2001+A1:2009, Clause 8.4)

Test Requirement	Results	Comment
	Sample 11#~12#:	
<p>General:</p> <p>a) head harness comfort</p> <p>b) security of fastenings</p> <p>c) field of vision</p> <p>d) any other comments reported by the wearer on request.</p>	<p>No imperfections</p>	<p>Pass</p>
<p>Walking Test:</p> <p>The subjects wearing normal working clothes and wearing the particle filtering half mask shall walk at a regular rate of 6 km/h on a level course. The test shall be continuous, without removal of the particle filtering half mask, for a period of 10 min.</p>	<p>No imperfections</p>	
<p>Work Simulation Test:</p> <p>a) walking on the level with headroom of (1.3 ± 0.2)m for 5min</p> <p>b) crawling on the level with headroom of (0.7 ± 0.05)m for 5min</p> <p>c) filling a small basket (see Figure 1, approximate volume = 8 L) with chippings or other suitable material from a hopper which stands 1.5 m high and has an opening at the bottom to allow the contents to be shovelled out and a further opening at the top where the basket full of chippings is returned.</p>	<p>No imperfections</p>	

Clause 7.8 Finish of Parts

EN 149:2001+A1:2009, Clause 8.2)

Test Requirement	Results	Comment
Parts of the device likely to come into contact with the wearer shall have no sharp edges or burrs.	No sharp edges or burrs	Pass

Clause 7.9.1 Total Inward Leakage

(EN 149:2001+A1:2009 Clause 8.5)

Test Requirement	Results	Comment
For particle filtering half masks fitted in accordance with the manufacturer's information, at least 46 out of the 50 individual exercise results (i.e. 10 subjects x 5 exercises) for total inward leakage shall be not greater than: 25% for FFP1 11% for FFP2 5% for FFP3 and, in addition, at least 8 out of the 10 individual wearer arithmetic means for the total inward leakage shall be not greater than: 22% for FFP1 8% for FFP2 2% for FFP3	Detail refer to Appendix 1	Pass

Appendix 1: Summarization of Test Data

Subject	Sample	Condition	Normal Breathing (%)	Head Side/Side (%)	Head Up/Down (%)	Speak Loudly (%)	Normal Breathing (%)	Mean (%)
Huang	1#	A.R.	1.9	2.5	2.7	3.0	2.1	2.44
Zhou	2#	A.R.	1.4	1.8	1.9	2.3	1.5	1.78
Ma	3#	A.R.	2.1	2.5	2.6	2.9	2.3	2.48
Wu	4#	A.R.	1.7	2.3	2.5	2.8	2.0	2.26
Li	5#	A.R.	2.5	2.9	3.1	3.3	2.6	2.88
Wu	6#	T.C.	2.3	2.6	2.8	3.2	2.5	2.68
Zhai	7#	T.C.	2.8	3.4	3.1	3.7	2.6	3.12
Zheng	8#	T.C.	2.2	2.3	2.3	2.8	3.0	2.52
Huang	9#	T.C.	1.6	2.0	2.4	2.7	1.8	2.10
Wu	10#	T.C.	3.0	3.3	3.1	3.5	3.1	3.20

Facial Dimension:

Subject	Length of Face (mm)	Width of Face (mm)	Depth of Face (mm)	Width of Mouth (mm)
Huang	130	140	125	53
Zhou	100	148	125	55
Ma	120	158	110	50
Wu	110	148	121	44
Li	112	146	112	50
Wu	120	154	128	54
Zhai	135	165	125	53
Zheng	106	155	112	54
Huang	105	157	118	51
Wu	112	172	118	55

Clause 7.9.2 Penetration of Filter Material

(EN 149:2001+A1:2009, Clause 8.11 & EN 13274-7:2019)

Test Requirement			Results	Comment
The penetration of the filter of the particle filtering half mask shall meet the requirements of the following table.			Detail refer to Appendix 2	Pass
Classification	Maximum penetration of test aerosol			
	Sodium chloride test 95 L/min % max.	Paraffin oil test 95 L/min % max.		
FFP1	20	20		
FFP2	6	6		
FFP3	1	1		

Appendix 2: Summarization of Test Data

Penetration of filter material

Aerosol	Condition	Sample No.	Penetration (%)		Assessment
			Average in 30s after 3 min	Max. during exposure	
Sodium chloride test	A.R.	13#	0.7	/	Pass
		14#	0.7	/	
		15#	0.7	/	
	S.W.	22#	0.9	/	
		23#	0.8	/	
		24#	0.8	/	
	M.S. + T.C.	25#	/	0.8	
		26#	/	0.8	
		27#	/	0.8	
Paraffin oil test	A.R.	16#	0.6	/	Pass
		17#	0.3	/	
		18#	0.3	/	
	S.W.	19#	0.3	/	
		20#	0.3	/	
		21#	0.3	/	
	M.S. + T.C.	28#	/	0.5	
		29#	/	0.5	
		30#	/	0.6	
Flow conditioning: 95.0 L/min					

Clause 7.10 Compatibility with Skin

(EN 149:2001+A1:2009, Clause 8.4 & 8.5)

Test Requirement	Results	Comment
Materials that may come into contact with the wearer's skin shall not be known to be likely to cause irritation or any other adverse effect to health.	No irritation or any other adverse effect to health.	Pass

Clause 7.11 Flammability

(EN 149:2001+A1:2009, Clause 8.6)

Test Requirement	Results	Comment
The material used shall not present a danger for the wearer and shall not be of highly flammable nature when tested, the particle filtering half mask shall not burn or not to continue on burn for more than 5 s after removal from the flame.	Detail refer to Appendix 3	Pass

Appendix 3: Summarization of Test Data

Flammability

Condition	Sample No.	Result	Assessment
A.R.	31#	Nonflammable	Pass
	32#	Flammable, burn for no more than 5 s	
T.C.	33#	Nonflammable	
	34#	Nonflammable	

Clause 7.12 Carbon Dioxide Content of The Inhalation Air

(EN 149:2001+A1:2009, Clause 8.7)

Test Requirement	Results	Comment
The carbon dioxide content of the inhalation air (dead space) shall not exceed an average of 1.0 % (by volume)	Detail refer to Appendix 4	Pass

Appendix 4: Summarization of Test Data

Carbon Dioxide Content of The Inhalation Air

Condition	Sample No.	Result	Assessment
A.R.	35#	0.37%	Pass
	36#	0.35%	
	37#	0.35%	
		Mean value: 0.36%	

Clause 7.13 Head Harness

(EN 149:2001+A1:2009, Clause 8.4 & 8.5)

Test Requirement	Results	Comment
The head harness shall be designed so that the particle filtering half mask can be donned and removed easily.	Comply	Pass
The head harness shall be adjustable or self-adjusting and shall be sufficiently robust to hold the particle filtering half mask firmly in position and be capable of maintaining total inward leakage requirements for the device.	Comply	

Clause 7.14 Field of Vision

(EN 149:2001+A1:2009, Clause 8.4)

Test Requirement	Results	Comment
The field of vision is acceptable if determined so in practical performance	Comply	Pass

Clause 7.15 Exhalation Valve(s)

(EN 149:2001+A1:2009, Clause 8.2 & 8.9.1 & 8.3.4 & 8.8)

Test Requirement	Results	Comment
a) A particle filtering half mask may have one or more exhalation valve(s), which shall function correctly in all orientations.	No valves.	N.A.
b) If an exhalation valve is provided it shall be protected against or be resistant to dirt and mechanical damage and may be shrouded or may include any other device that may be necessary for the particle filtering half mask to comply with 7.9.	No valves.	
c) Exhalation valve(s), if fitted, shall continue to operate correctly after a continuous exhalation flow of 300 l/min over a period of 30 s.	No valves.	
(d) When the exhalation valve housing is attached to the face blank, it shall withstand axially a tensile force of 10N applied for 10 s.	No valves.	

Clause 7.16 Breathing Resistance
EN 149:2001+A1:2009, Clause 8.9)

Test Requirement				Results	Comment
The breathing resistances apply to valved and valveless filtering half masks and shall meet the requirements as the following table.				Detail refer to Appendix 5	Pass
Classification	Maximum permitted resistance (mbar)				
	Inhalation		Exhalation		
	30 L/min	95 L/min	160 L/min		
FFP1	0.6	2.1	3.0		
FFP2	0.7	2.4	3.0		
FFP3	1.0	3.0	3.0		

Appendix 5: Summarization of Test Data

Specimen	Condition	Inhalation(mbar)		Exhalation resistance(mbar)				
		At 30 L/min	At 95 L/min	At 160 L/min				
				A	B	C	D	E
38#	A.R.	0.6	2.0	2.6	2.6	2.6	2.6	2.6
39#		0.5	1.9	2.6	2.6	2.6	2.6	2.6
40#		0.5	2.0	2.6	2.6	2.6	2.6	2.6
41#	S.W.	0.5	1.7	2.3	2.3	2.3	2.3	2.3
42#		0.5	1.6	2.2	2.2	2.2	2.2	2.2
43#		0.5	1.7	2.2	2.2	2.1	2.2	2.2
44#	T.C.	0.5	1.5	2.1	2.1	2.1	2.1	2.1
45#		0.5	1.5	2.1	2.1	2.1	2.1	2.1
46#		0.5	1.5	2.2	2.1	2.1	2.1	2.1
/	F.C.	/	/	/	/	/	/	/
/		/	/	/	/	/	/	/
/		/	/	/	/	/	/	/

A: facing directly ahead; B: facing vertically upwards; C: facing vertically downwards; D: lying on the left side; E: lying on the right side

Clause 7.17 Clogging

(EN 149:2001+A1:2009, Clause 8.9 & 8.10)

Test Requirement			Results	Comment
Clause 7.17.2 Breathing resistance Valved particle filtering half masks: After clogging the inhalation resistances shall not exceed: FFP1: 4 mbar, FFP2: 5 mbar, FFP3: 7 mbar at 95L/min continuous flow The exhalation resistance shall not exceed 3 mbar at 160 L/min continuous flow. Valveless particle filtering half masks: After clogging the inhalation and exhalation resistances shall not exceed: FFP1: 3 mbar, FFP2: 4 mbar, FFP3: 5 mbar at 95L/min continuous flow			Requirement not applicable.	N.A.
Test Requirement			Results	Comment
Clause 7.17.3 Penetration of filter material All types (valved and valveless) of particle filtering half masks claimed to meet the clogging requirement shall also meet the requirements.			Requirement not applicable.	N.A.
Classification	Maximum penetration of test aerosol			
	Sodium chloride test 95 L/min	Paraffin oil test 95 L/min		
	%	%		
	max.	max.		
FFP1	20	20		
FFP2	6	6		
FFP3	1	1		

Clause 7.18 Demountable Parts

(EN 149:2001+A1:2009, Clause 8.2)

Test Requirement	Results	Comment
All demountable parts (if fitted) shall be readily connected and secured, where possible by hand	Comply	Pass

Sample photo(s):

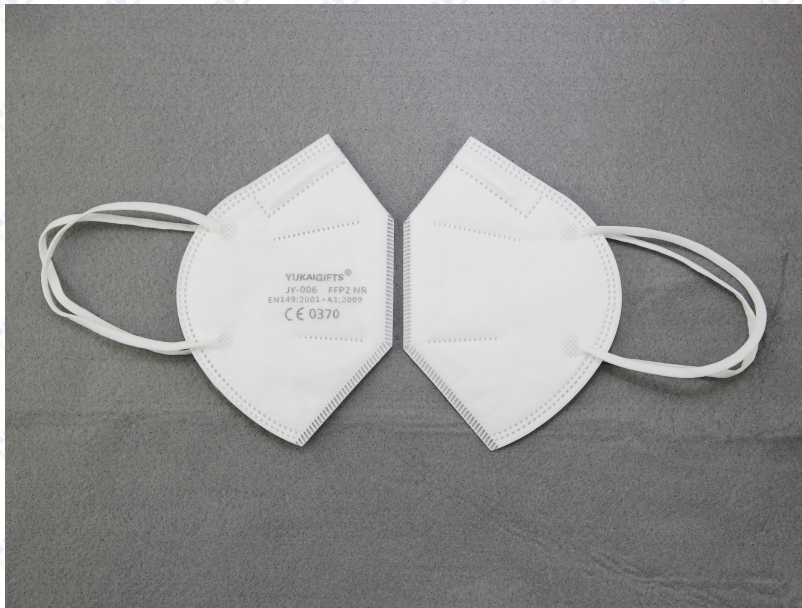


Fig.1

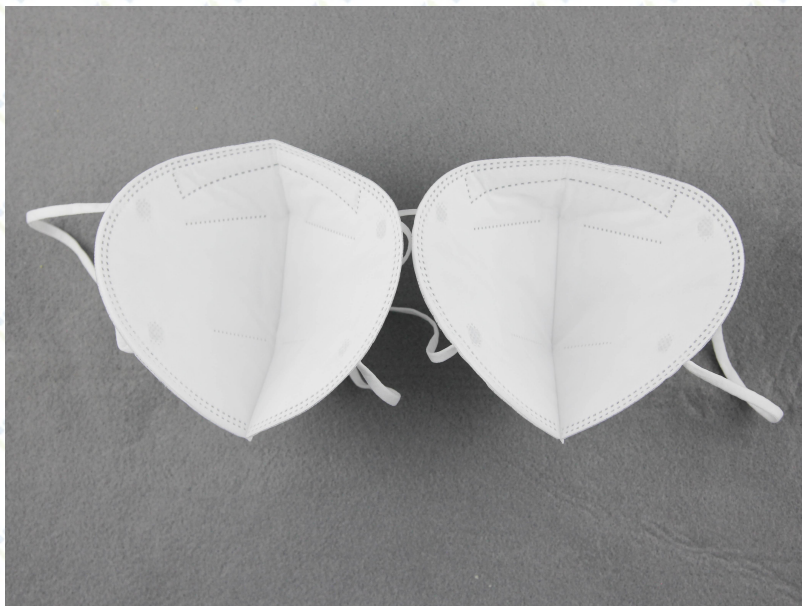


Fig.2

This test report displaces the original report No. S20081803801E, and the original one was invalid since the date of this test report No. S20081803801E-R1 released.

****End of Report****

The test report is effective only with both signature and specialized stamp, the result(s) shown in this report refer only to the sample(s) tested. Without written approval of NTEK, this report can't be reproduced except in full.

Test Report

Applicant: Wenzhou Jinyi Medical Equipment Co., Ltd.
Address: No.518-536, Zhengsong Avenue, Wanquan Town, Pingyang County,
Wenzhou, Zhejiang, 325409, China

The following sample(s) was/were submitted and identified on behalf of the client as:

Product name: Filtering half mask
Model: JY-006
Brand: YUKAIGIFTS®

Manufacturer: Wenzhou Jinyi Medical Equipment Co., Ltd.
Address: No.518-536, Zhengsong Avenue, Wanquan Town, Pingyang County,
Wenzhou, Zhejiang, 325409, China

Classification: FFP2 NR
Sample quantity: 70 Pcs
C2 Sampling done by
APPLUS+ with ID
number : 20/32301951
Sample Received
Date: Sep. 29, 2020
Testing Period: Sep. 29, 2020~ Oct. 12, 2020

Test Requirement:

According to the requirement of the Module C2 (SPC CE-062_EN M3 PPE) of Applus+, the test item(s) of the sample is according to the standard EN 149:2001+A1:2009.

Test Result(s): Please refer to the following page(s)

Test Method: Please refer to the following page(s)

Compiled by: _____

Reviewed by: _____

Approved by: _____

Date: _____

2020-10-15

Summary of assessment*

Clause	Assessment
7.3 Visual inspection	Pass
7.5 Material	Pass
7.8 Finish of parts	Pass
7.9.1 Total inward leakage	Pass
7.9.2 Penetration of filter material	Pass
7.12 Carbon dioxide content of the inhalation air	Pass
7.16 Breathing resistance	Pass

Key

Pass	Requirement satisfied.
NRq	The clauses were not required.
Fail	Requirement not satisfied. Refer to the "Result details" section for more information.
N.A.	Requirement not applicable.

Test	Uncertainty
Total inward leakage	6.40 %
Penetration of filter material (NaCl)	1.60 %
Penetration of filter material (Paraffin Oil)	1.78 %
Carbon dioxide content of the inhalation air	5.34 %
Breathing resistance (30 L/min)	3.60 %
Breathing resistance (95 L/min)	2.20 %
Breathing resistance (160 L/min)	2.00 %

* Assessment relates only to those specimens which were tested and are the subject of this report.

Test Result

Respiratory Protective Devices — Filtering Half Masks to Protect against Particles — Requirements, Testing, Marking
(EN 149:2001+A1:2009)

Clause 7.3 Visual inspection

Test Requirement	Results	Comment
Marking and the information supplied by the manufacturer, requirements refer to clause 9 and clause 10.	Comply	Pass

Clause 7.5 Material

(EN 149:2001+A1:2009, Clause 8.2 & 8.3.1 & 8.3.2)

Test Requirement	Results	Comment
Materials used shall be suitable to withstand handling and wear over the period for which the particle filtering half mask is designed to be used.	Comply	Pass
After undergoing the conditioning described in 8.3.1 none of the particle filtering half masks shall have suffered mechanical failure of the face piece or straps.	Comply	Pass
When conditioned in accordance with 8.3.1 and 8.3.2 the particle filtering half mask shall not collapse.	Comply	Pass
Any material from the filter media released by the air flow through the filter shall not constitute a hazard or nuisance for the wearer.	Comply	Pass

Clause 7.8 Finish of Parts

EN 149:2001+A1:2009, Clause 8.2)

Test Requirement	Results	Comment
Parts of the device likely to come into contact with the wearer shall have no sharp edges or burrs.	No sharp edges or burrs	Pass

Clause 7.9.1 Total Inward Leakage
(EN 149:2001+A1:2009 Clause 8.5)

Test Requirement	Results	Comment
<p>For particle filtering half masks fitted in accordance with the manufacturer's information, at least 46 out of the 50 individual exercise results (i.e. 10 subjects x 5 exercises) for total inward leakage shall be not greater than:</p> <p style="padding-left: 40px;">25% for FFP1 11% for FFP2 5% for FFP3</p> <p>and, in addition, at least 8 out of the 10 individual wearer arithmetic means for the total inward leakage shall be not greater than:</p> <p style="padding-left: 40px;">22% for FFP1 8% for FFP2 2% for FFP3</p>	Detail refer to Appendix 1	Pass

Appendix 1: Summarization of Test Data

Subject	Sample	Condition	Normal Breathing (%)	Head Side/Side (%)	Head Up/Down (%)	Speak Loudly (%)	Normal Breathing (%)	Mean (%)
Zhang	1#	A.R.	2.2	2.3	2.5	2.6	2.1	2.34
Fan	2#	A.R.	2.1	2.2	2.3	2.5	2.0	2.22
Yan	3#	A.R.	2.9	3.0	3.1	3.2	2.7	2.98
Huang	4#	A.R.	3.0	3.1	3.3	3.3	3.0	3.14
Yang	5#	A.R.	3.0	3.2	3.2	3.5	2.9	3.16
Shi	6#	T.C.	1.7	1.8	1.9	2.1	1.9	1.88
Huang	7#	T.C.	1.9	2.1	2.2	2.3	2.0	2.10
Chen	8#	T.C.	2.0	2.1	2.2	2.4	2.1	2.16
Lei	9#	T.C.	2.6	2.7	2.9	3.0	2.5	2.74
Shen	10#	T.C.	2.5	2.5	2.6	2.8	2.4	2.56

Facial Dimension:

Subject	Length of Face (mm)	Width of Face (mm)	Depth of Face (mm)	Width of Mouth (mm)
Zhang	120	175	115	57
Fan	120	155	115	55
Yan	125	165	120	55
Huang	116	187	126	57
Yang	104	165	115	52
Shi	110	144	117	46
Huang	115	135	121	57
Chen	111	137	121	53
Lei	112	136	110	54
Shen	112	134	120	53

Clause 7.9.2 Penetration of Filter Material

(EN 149:2001+A1:2009, Clause 8.11 & EN 13274-7:2019)

Test Requirement			Results	Comment
The penetration of the filter of the particle filtering half mask shall meet the requirements of the following table.			Detail refer to Appendix 2	Pass
Classification	Maximum penetration of test aerosol (%)			
	Sodium chloride test 95 L/min	Paraffin oil test 95 L/min		
FFP1	20	20		
FFP2	6	6		
FFP3	1	1		

Appendix 2: Summarization of Test Data

Penetration of filter material

Aerosol	Condition	Sample No.	Penetration (%)		Assessment
			Average in 30s after 3 min	Max. during exposure	
Sodium chloride test	A.R.	11#	0.8	/	Pass
		12#	0.7	/	
		13#	0.8	/	
	S.W.	17#	0.7	/	
		18#	0.7	/	
		19#	0.7	/	
	M.S. + T.C.	23#	/	0.8	
		24#	/	0.9	
		25#	/	0.9	
	Paraffin oil test	A.R.	14#	0.2	
15#			0.2	/	
16#			0.2	/	
S.W.		20#	0.5	/	
		21#	0.5	/	
		22#	0.5	/	
M.S. + T.C.		26#	/	0.5	
		27#	/	0.8	
		28#	/	0.4	
Flow conditioning: 95.0 L/min					

Clause 7.12 Carbon Dioxide Content of The Inhalation Air

(EN 149:2001+A1:2009, Clause 8.7)

Test Requirement	Results	Comment
The carbon dioxide content of the inhalation air (dead space) shall not exceed an average of 1,0 % (by volume)	Detail refer to Appendix 3	Pass

Appendix 3: Summarization of Test Data

Carbon Dioxide Content of The Inhalation Air

Condition	Sample No.	Result		Assessment
A.R.	29#	0.55%	Mean value 0.56%	Pass
	30#	0.57%		
	31#	0.56%		

Clause 7.16 Breathing Resistance

EN 149:2001+A1:2009, Clause 8.9)

Test Requirement				Results	Comment
The breathing resistances apply to valved and valveless filtering half masks and shall meet the requirements as the following table.				Detail refer to Appendix 4	Pass
Classification	Maximum permitted resistance (mbar)				
	Inhalation		Exhalation		
	30 L/min	95 L/min	160 L/min		
FFP1	0.6	2.1	3.0		
FFP2	0.7	2.4	3.0		
FFP3	1.0	3.0	3.0		

Appendix 4: Summarization of Test Data

Specimen	Condition	Inhalation(mbar)		Exhalation resistance(mbar)				
		At 30 L/min	At 95 L/min	At 160 L/min				
				A	B	C	D	E
32#	A.R.	0.5	1.7	2.2	2.2	2.2	2.2	2.2
33#		0.5	1.7	2.2	2.2	2.2	2.2	2.2
34#		0.5	1.7	2.2	2.2	2.2	2.2	2.2
35#	S.W.	0.5	1.8	2.3	2.3	2.3	2.3	2.3
36#		0.5	1.8	2.3	2.3	2.3	2.3	2.3
37#		0.5	1.8	2.3	2.3	2.3	2.3	2.3
38#	T.C.	0.5	1.7	2.2	2.2	2.2	2.3	2.2
39#		0.5	1.7	2.2	2.2	2.2	2.2	2.2
40#		0.5	1.7	2.2	2.2	2.2	2.2	2.2
/	T.C.+F.C.	/	/	/	/	/	/	/
/		/	/	/	/	/	/	/
/	F.C.	/	/	/	/	/	/	/

A: facing directly ahead; B: facing vertically upwards; C: facing vertically downwards; D: lying on the left side; E: lying on the right side

Sample photo(s):



Fig.1



Fig.2



Fig.3



Fig.4



Fig.5



Fig.6

This test report displaces the original report No. S20081803802E, and the original one was invalid since the date of this test report No. S20081803802E-R1 released.

****End of Report****

The test report is effective only with both signature and specialized stamp, the result(s) shown in this report refer only to the sample(s) tested. Without written approval of NTEK, this report can't be reproduced except in full; The laboratory is not responsible for the authenticity of the sample information provided by the customer; The laboratory is not responsible for any deviation of results due to methods/standards provided by the customer.

产品展示

BLUE





RED

YUKAIGIFTS®

FFP2
NO USO MEDICO
JY-006

PERCENTUALE DI FILTRAZIONE **95%**

MASCHERINA RESPIRATORIA

CE 0370
FFP2 NR
EN149:2001+A1:2009



YUKAIGIFTS®
JY-006 FFP2 NR
EN149:2001+A1:2009
CE 0370

- Design solido 3D
- Non irrita la pelle, assorbe l'acqua, è comoda e morbida
- Aumenta efficacemente il tempo di utilizzo di oltre il 30%
- Filtrazione elettrostatica di cotone ad alta efficienza PM2.5
- Bassa resistenza e alta efficienza
- La mascherina ti copre al 100% con materiale filtrante ad alta efficienza

10PZ

MASK

DIRETTIVE: REGOLAZIONI (EU) 2016/425
CE 0370

YUKAIGIFTS®

JY-006

MASSIMA QUALITÀ MASSIMA FILTRAZIONE

Maschera Filtrante

No uso medico
Questa mascherina è utilizzata per proteggere dall'inalazione di particelle sospese



8055492009613

1PZ

MASCHERINA RESPIRATORIA
FFP2

YUKAIGIFTS®

PERCENTUALE DI FILTRAZIONE **95%**

MASCHERINA RESPIRATORIA


CE 0370
FFP2 NR
EN149:2001+A1:2009

ITA Istruzioni

- 1- Lava accuratamente le mani con acqua e sapone o con disinfettante a base di alcol prima di indossare la mascherina.
- 2- Indossa la mascherina impugnandola dagli elastici laterali.
- 3- Nel coprire la bocca e il naso, assicurati che non ci siano spazi tra il viso e la mascherina in modo che aderisca bene al volto.
- 4- Evita di toccare la mascherina durante l'uso e sostituiscila con una nuova appena è umida.
- 5- Rimuovi la mascherina dalla estremità laterali senza toccare la parte anteriore.
- 6- Subito dopo l'uso buttala in un apposito contenitore.
- 7- Lava subito le mani con acqua e sapone o gel igienizzante.

ENG Instructions

- 1- Wash your hands thoroughly with water and a bag or alcohol-based disinfectant before putting on the mask.
- 2- Wear the mask gripping it by the side elastics.
- 3- When covering the mouth and nose, make sure there are no spaces between the face and the mask so that it fits snugly to the face.
- 4- Avoid touching the mask during use and replace it with a new one as soon as it is wet.
- 5- Remove the mask from the side ends without touching the front.
- 6- Immediately after use, throw it in a special container.
- 7- Wash your hands immediately with soap and water or sanitizing gel



CE 0370
EN149:2001+A1:2009
FFP2 NR

JY-006

YUKAIGIFTS®

FFP2
NO USO MEDICO
JY-006

PERCENTUALE DI FILTRAZIONE **95%**

MASCHERINA RESPIRATORIA

CE 0370
FFP2 NR
EN149:2001+A1:2009



YUKAIGIFTS®
JY-006 FFP2 NR
EN149:2001+A1:2009
CE 0370

- Design solido 3D
- Non irrita la pelle, assorbe l'acqua, è comoda e morbida
- Aumenta efficacemente il tempo di utilizzo di oltre il 30%
- Filtrazione elettrostatica di cotone ad alta efficienza PM2.5
- Bassa resistenza e alta efficienza
- La mascherina ti copre al 100% con materiale filtrante ad alta efficienza

10PZ

DIRETTIVE: REGOLAZIONI (EU) 2016/425
CE 0370

YUKAIGIFTS®

JY-006

MASSIMA QUALITÀ MASSIMA FILTRAZIONE

Maschera Filtrante

No uso medico
Questa mascherina è utilizzata per proteggere dall'inalazione di particelle sospese



8055492009613

1PZ



YUKAIGIFTS®

DIRETTIVE: REGOLAZIONI
(EU) 2016/425
CE 0370

JY-006

MASK

MASSIMA QUALITÀ MASSIMA FILTRAZIONE

Maschera Filtrante

No uso medico

Questa mascherina è utilizzata per proteggere dall'inhalazione di particelle sospese



1PZ

MASCHERINA RESPIRATORIA FFP2

YUKAIGIFTS®



ITA Istruzioni

- 1- Lava accuratamente le mani con acqua e sapone o con disinfettante a base di alcol prima di indossare la mascherina.
- 2- Indossa la mascherina impugnandola dagli elastici laterali.
- 3- Nel coprire la bocca e il naso, assicurati che non ci siano spazi tra il viso e la mascherina in modo che aderisca bene al volto.
- 4- Evita di toccare la mascherina durante l'uso e sostituiscila con una nuova non appena è umida.
- 5- Rimuovi la mascherina dalla estremità laterali senza toccare la parte anteriore.
- 6- Subito dopo l'uso buttala in un apposito contenitore.
- 7- Lava subito le mani con acqua e sapone o gel igienizzante.

ENG Instructions

- 1-Wash your hands thoroughly with water and a bag or alcohol-based disinfectant before putting on the mask.
- 2- Wear the mask gripping it by the side elastics.
- 3- When covering the mouth and nose, make sure there are no spaces between the face and the mask so that it fits snugly to the face.
- 4- Avoid touching the mask during use and replace it with a new one as soon as it is wet.
- 5- Remove the mask from the side ends without touching the front.
- 6- Immediately after use, throw it in a special container.
- 7- Wash your hands immediately with soap and water or sanitizing gel



CE 0370
EN149:2001+A1:2009
FFP2-NR

JY-006



PLEASE
RECYCLE

DE Anleitung

- 1-Waschen Sie Ihre Hände gründlich mit Wasser und einem Beutel oder Desinfektionsmittel auf Alkoholbasis, bevor Sie die Maske aufsetzen.
- 2- Tragen Sie die Maske an den seitlichen Gummibändern.
- 3- Achten Sie beim Abdecken von Mund und Nase darauf, dass zwischen Gesicht und Maske keine Zwischenräume vorhanden sind, damit sie genau ins Gesicht passen.
- 4- Berühren Sie die Maske während des Gebrauchs nicht und ersetzen Sie sie durch eine neue, sobald sie nass ist.
- 5- Entfernen Sie die Maske von den Seitenenden, ohne die Vorderseite zu berühren.
- 6- Werfen Sie es sofort nach Gebrauch in einen speziellen Behälter.
- 7- Waschen Sie Ihre Hände sofort mit Wasser und Seife oder Desinfektionsgel

FR Instructions

- 1-Lavez-vous soigneusement les mains avec de l'eau et un sac ou avec un désinfectant à base d'alcool avant de mettre le masque.
- 2- Portez le masque en le saisissant par les élastiques latéraux.
- 3- Lorsque vous couvrez la bouche et le nez, assurez-vous qu'il n'y a pas d'espace entre le visage et le masque afin qu'il s'adapte parfaitement au visage.
- 4- Évitez de toucher le masque pendant l'utilisation et remplacez-le par un neuf dès qu'il est mouillé.
- 5- Retirez le masque des extrémités latérales sans toucher le devant.
- 6- Immédiatement après utilisation, jetez-le dans un récipient spécial.
- 7- Lavez-vous immédiatement les mains avec du savon et de l'eau ou un gel désinfectant

ESP Instrucciones

- 1-Lávese bien las manos con agua y una bolsa o desinfectante a base de alcohol antes de ponerse la mascarilla.
- 2- Lleva la máscara sujetándola por los elásticos laterales.
- 3- Al cubrir la boca y la nariz, asegúrese de que no queden espacios entre el rostro y la mascarilla para que se ajuste perfectamente al rostro.
- 4- Evite tocar la mascarilla durante el uso y reemplázela por una nueva tan pronto como esté mojada.
- 5- Retirar la mascarilla de los extremos laterales sin tocar la parte delantera.
- 6- Inmediatamente después de su uso, tirelo en un recipiente especial.
- 7- Lávese las manos inmediatamente con agua y jabón o gel desinfectante

CE 0370
EN149:2001+A1:2009
FFP2-NR

JY-006



PLEASE
RECYCLE

